

### On & Off

- Press once to switch on.
- Press again to switch off

(Automatic off after 20mins)

Inlet for  
-ve pressure

Inlet for  
+ve pressure

### Recorder for Time & Pressure

- Press once to start.
- Press again for max pressure (recorded).
- Press again for min pressure (recorded).
- Press for 3 secs to turn off recorder.

### Hold

- Press once to Hold the current pressure.
- Press for 3 secs to reset pressure to **zero**

(Ensure there is no residual pressure in the connectors)

### Differential


- Press once to display difference between -ve & +ve Inlets
- Press again to cancel.

### Units

- Press to scroll between to the required units; e.g. **psi, inHg, bar, etc.**

### Backlight

- Press once (gives 30 secs illumination)

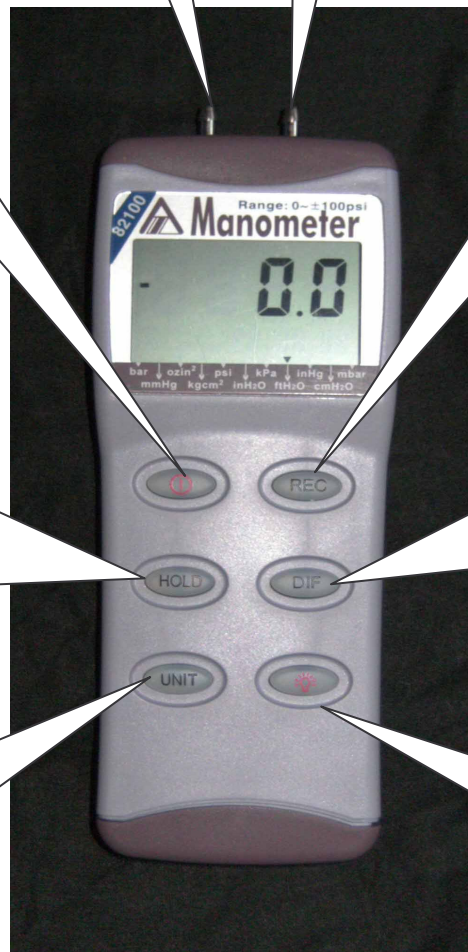

### Vacuum Bag Test Procedure

1. Turn **On** manometer (check for **zero** & battery low indication).
2. Connect **-ve pressure** line to the Vacuum Bag Connector.
3. Select the required **Units** e.g. psi.
4. If the Vacuum Bag pressure is at the required level isolate the vacuum supply to the bag & start the **Recorder**.
5. Check time & any pressure drop against required standards.



LRQ 0964702

J R TECHNOLOGY LIMITED, 81 NORTH END, MELDRETH, ROYSTON, HERTS. SG8 6NU, UK  
Tel.- +44 (0)1763 260721 Fax.- +44 (0)1763 260809  
e-mail.- enquiries@jrtech.co.uk Website.- www.jrtech.co.uk

JRTD0660/01